



ELEKTRA BECKUM

Ein Unternehmen der Metabo-Gruppe

English only

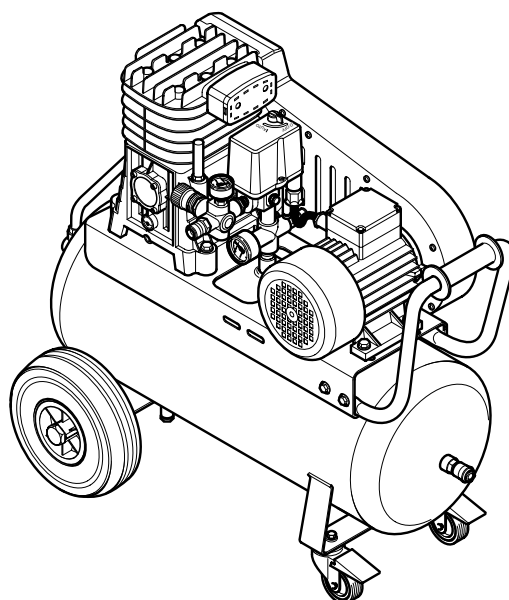

Mega 350 D

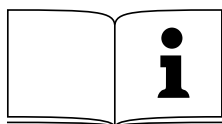

(D)	Betriebsanleitung	3
(ENG)	Operating Instruction	10
(F)	Instructions d'utilisation	16
(NL)	Handleiding	23
(IT)	Manuale d'istruzioni	30
(ES)	Manual de uso	37
(DA)	Betjeningsvejledning	44
(SV)	Bruksanvisning	50

D DEUTSCH**KONFORMITÄTSERKLÄRUNG**

Wir erklären in alleiniger Verantwortlichkeit, daß dieses Produkt mit den folgenden Normen übereinstimmt* gemäß den Bestimmungen der Richtlinien** Prüfbericht *** ausstellende Prüfstelle **** Gemessener/ Garantierter Schalleistungspegel*****

F FRANÇAIS**DECLARATION DE CONFORMITE**

Nous déclarons, sous notre seule responsabilité, que ce produit est en conformité avec les normes ou documents normatifs suivants* en vertu des dispositions des directives **Compte-rendu de revision *** effectué par ****Niveau de puissance acoustique mesuré/ garanti*****

IT ITALIANO**DICHIARAZIONE DI CONFORMITÀ**

Noi dichiariamo sotto la nostra esclusiva responsabilità che il presente prodotto è conforme alle seguenti norme* in conformità con le disposizioni delle normative ** verbale di prova *** eseguita da ****Livello di potenza sonora misurato/ garantito*****

PT PORTUGUÊS**DECLARAÇÃO DE CONFORMIDADE**

Declaramos sob nossa responsabilidade que este produto está de acordo com as seguintes normas* de acordo com as directrizes dos regulamentos ** Acta de revisão *** efectuado por ****Nível de potência acústica medido/ garantido*****

FIN SUOMI**VAATIMUKSEN MUKAISUUSVAKUUTUS**

Vakuutamme, että tämä tuote vastaa seuraavia normeja* on direktiivien määräysten mukainen** tarkastusraportti*** testin suorittaja****Mitattu/ Taattu äänen tehotaso*****

DA DANSK**OVERENSSTEMMELSE ATTEST**

Hermed erklærer vi på eget ansvar, at dette produkt stemmer overens ed følgende standarder* iht. bestemmelserne i direktiverne** rapport *** gennemført af ****Målt/ Garanteret lydeffektniveau*****

EL ΕΛΛΗΝΙΚΑ**ΔΗΛΩΣΗ ΑΝΤΙΣΤΟΙΧΙΑΣ**

Δηλώνουμε με ίδια ευθύνη ότι το προϊόν αυτό αντιστοιχεί στις ακόλουθες προδιαγραφές* σύμφωνα με τις διατάξεις των οδηγιών** Έκθεση ελεγχου*** πραγματοποιούμενος από το****Μετρηθείσα/ Εγγυημένη στάθμη απόδοσης ήχου*****

ENG ENGLISH**DECLARATION OF CONFORMITY**

We herewith declare in our sole responsibility that this product complies with the following standards* in accordance with the regulations of the undermentioned Directives** testreport *** issuing test office ****measured/ guaranteed sound power level*****

NL NEDERLANDS**CONFORMITEITSVERKLARING**

Wij verklaren als enige verantwoordelijke, dat dit product in overeenstemming is met de volgende normen* conform de bepalingen van de richtlijnen** keuringsinstantie *** uitgevoerd door ****Gemeten/ Gegarandeerd geluidsniveau*****

ES ESPAÑOL**DECLARACION DE CONFORMIDAD**

Declaramos bajo nuestra exclusiva responsabilidad, que el presente producto cumple con las siguientes normas* de acuerdo a lo dispuesto en las directrices** Acta de revisión *** llevada a cabo por ****Nivel de potencia acústica medido/ garantizado*****

SV SVENSKA**FÖRSÄKRAN OM ÖVERENSSTÄMMELSE**

Vi försäkrar på eget ansvar att denna produkt överensstämmer med följande standarder* enligt bestämmelserna i direktiven**provsningsrapport *** genomfört av ****Uppmätt/ Garanterad ljudnivå*****

NO NORGE**SAMSVARERKLÆRING**

Vi erklærer under eget ansvar at dette produkt samsvarer med følgende normer* henhold til bestemmelsene i direktiv** prøverapport *** utstilt av ****Målt/ Garantert lydeffektnivå*****

POL POLSKI**OŚWIADCZENIE O ZGODNOŚCI**

Oświadczamy z pełną odpowiedzialnością, że niniejszy produkt odpowiada wymogom następujących norm* według ustaleń wytycznych **sprawozdanie z kontroli technicznej *** przeprowadzone przez ****Zmierzony/ Gwarantowany poziom ciśnienia akustycznego*****

HU MAGYAR**MEGEGYZŐSÉGI NYILATKOZAT**

Kizárólagos felelősségünk tudatában ezennel igazoljuk, hogy ez a termék kielégíti az alábbi szabványokban lefektetett követelményeket* megfelel az alábbi irányelvek előírásainak** Vizsgálati jegyzőkönyv *** a **** Mért/ Garantált zajszint*****

MEGA 350 D


* EN 1012-1, EN 60204-1, EN ISO 3744

** 98/37/ EWG, 89/336/ EWG, 73/23/ EWG, 93/68/ EWG, 2000/14/ EG Annex VI, P< 15KW

*** CE-DE10-143 677

**** DE10 - TÜV Hannover/ Sachsen Anhalt e.V.

***** L_{WA} = 91 dB/1pW - L_{WAd} = 92 dB/1pW

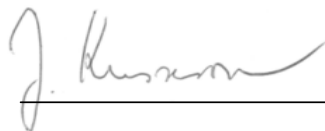

Dipl. Ing. Jürgen Kusserow

Vorstand




ELEKTRA BECKUM AG – Daimlerstraße 1 – 49716 Meppen

Meppen, 20.12.2001

1001055

1. Machine overview

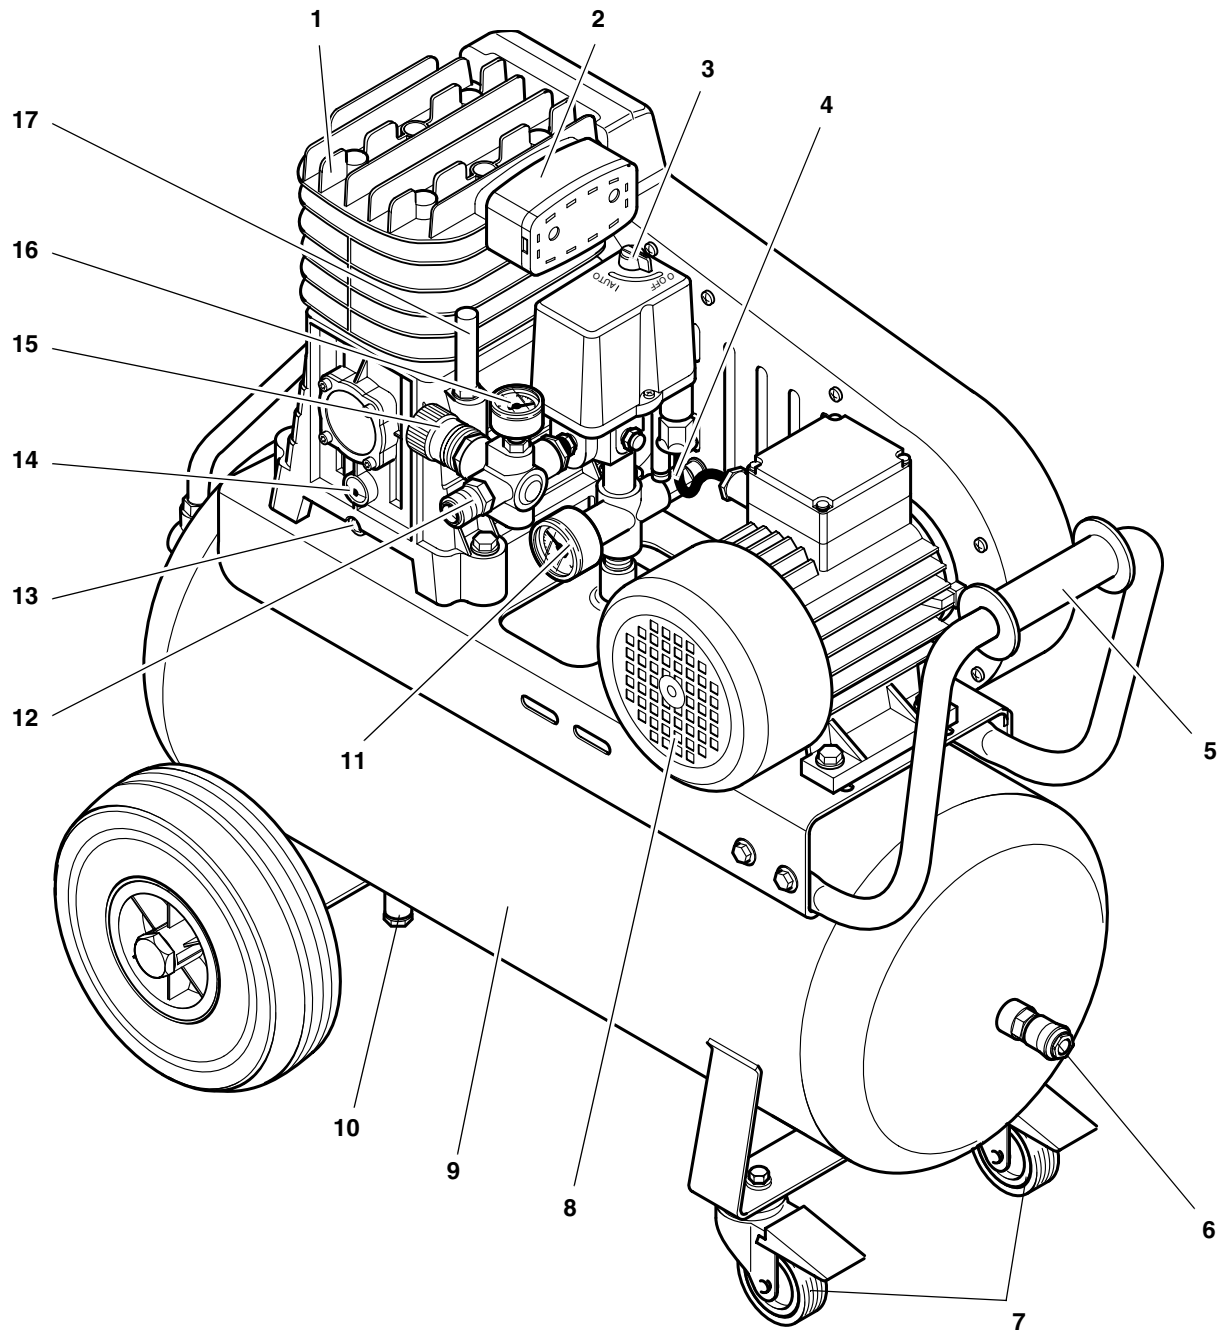

- | | |
|---------------------------------------|---|
| 1 Compressor pump | 10 Condensate drain cock of pressure vessel |
| 2 Air intake filter housing | 11 Tank pressure gauge |
| 3 On/Off switch | 12 Outlet for regulated compressed air |
| 4 Safety valve | 13 Oil drain plug |
| 5 Transport handle | 14 Oil sight glass |
| 6 Outlet for regulated compressed air | 15 Pressure regulator |
| 7 Swivel plate casters, lockable | 16 Outlet pressure gauge |
| 8 Motor | 17 Oil filler plug |
| 9 Pressure vessel | |

Table of Contents

1. Machine overview	10
2. Please read first!	11
3. Safety	11
3.1 Specified conditions of use	11
3.2 General safety information	11
3.3 Safety devices	12
4. Operation	12
4.1 Prior to initial operation	12
4.2 Mains connection	12
4.3 Generating compressed air	12
5. Care and maintenance	12
5.1 Periodic maintenance	12
5.2 Device storage	13
6. Available Accessories	13/56
7. Trouble shooting	14
8. Repairs	15
9. Environmental protection	15
10. Technical specifications	15

2. Please read first!

- Read these instructions before use. Pay special attention to the safety information.
- If you notice transport damage while unpacking, notify your supplier immediately. **Do not** operate the device!
- Dispose of the packing in an environmentally friendly manner. Take to a proper collecting point.
- Keep these instructions for reference on any issues you may be uncertain about. Also keep the test certificates of all compressed air components.
- If you lend or sell this device be sure to have the instructions to go with it.

3. Safety

3.1 Specified conditions of use

This device is intended to generate compressed air required for the operation of air tools.

Any use for medical purposes, food processing as well as filling of oxygen cylinders for breathing equipment is not permitted.

Explosive, combustible gases or gases detrimental to health may not be compressed. Operation in hazardous locations is not permitted.

Any other use is not as specified. Use not as specified, alteration of the device or use of parts not approved by the equipment manufacturer, can cause unforeseeable damage!

Children, juveniles and persons not having been instructed in its usage are not permitted to operate this device and any air tools connected to it.

3.2 General safety information

When using this electric tool observe the following safety instructions, to exclude the risk of personal injury or material damage.

Please also observe the special safety instructions in the respective chapters. Keep all documents, supplied with the device, for future reference.

Observe the statutory accident insurance institution regulations and regulations for the prevention of accidents pertaining to the operation of air compressors and air tools, where applicable.



General hazard!

Keep your work area tidy – a messy work area invites accidents.

Be alert. Know what you are doing. Set out to work with reason. Do not operate the electric tool while under the influence of drugs, alcohol or medication. Consider environmental conditions.

Keep work area well lighted. Prevent adverse body positions. Ensure firm footing and keep your balance at all times.

Do not operate the electric tool near inflammable liquids or gases. Keep bystanders, particularly children, out of the work area. Do not permit other persons to touch the tool or power cable while the electric tool is running.

Do not overload the electric tool – use it only within the performance range it was designed for (see "Technical specifications").



Danger! Risk of electric shock!

Do not expose the electric tool to rain.

Do not operate the electric tool in damp or wet environment.

Prevent body contact with earthed objects such as radiators, pipes, cooking stoves or refrigerators when operating this electric tool.

Do not use the power cable for any purpose it is not intended for.



Risk of personal injury by escaping compressed air and parts hurled about by escaping air!

Never direct compressed air against persons or animals!

Ensure all air tools and accessories used are designed for the working pressure or are supplied via a pressure regulator.

Please note that, when disconnecting the quick coupler, the compressed air contained in the pressure hose will

escape all of a sudden. You should therefore hold the air hose firmly when disconnecting it.

Ensure all screwed connections are fully tightened at all times.

Do not attempt to repair the device yourself! Only trained specialists are permitted to service or repair compressors, pressure vessels and air tools.



Hazard generated by oil-saturated compressed air!

Use oil saturated compressed air only for air tools requiring such supply. Do not use an air hose used to supply compressed air containing oil to supply air tools not designed for operation on compressed air containing oil. Do not fill tires with compressed air containing oil.



Risk of burns from the surfaces of parts carrying compressed air!

Let tool cool off before servicing.



Risk of personal injury and crushing by moving parts!

Do not operate the electric tool without installed guards.

Please note that the compressor will start automatically when the pressure falls off to minimum! – disconnect from power supply prior to any servicing.

Ensure that when turning ON (e.g. after servicing) no tools or loose parts are in the electric tool.



Hazard generated by insufficient personal protection gear!

Wear hearing protection.

Wear safety glasses.

Wear mask respirator when work generates dust or mist detrimental to health.

Wear suitable work clothes. When working outdoors wearing of non-slip shoes is recommended.



Hazard generated by electric tool defects!

Keep electric tool and accessories in good repair. Observe the maintenance instructions.


Prior to any use check the electric tool for possible damage: before using the electric tool carefully check safety devices, protection devices or slightly damaged parts for proper function as specified. Check to see that all moving parts work properly and do not jam. All parts must be correctly installed and meet all conditions necessary for the proper operation of the electric tool.

Damaged protection devices or parts must be repaired or replaced by a qualified specialist. Have damaged switches replaced by a service centre. Do not operate electric tool if the switch can not be turned ON or OFF.

Keep handles free of oil and grease.

3.3 Safety devices

Safety valve

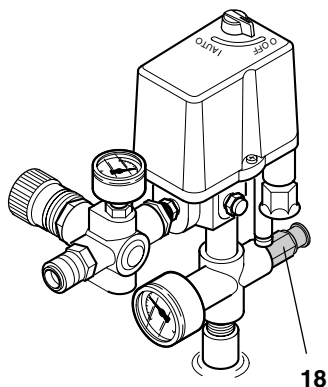


The spring-loaded safety valve (18) is incorporated into the pressure switch. The safety valve opens if the max. permissible pressure is exceeded.

4. Operation

4.1 Prior to initial operation

Wheel installation

1. Install the wheels as illustrated.

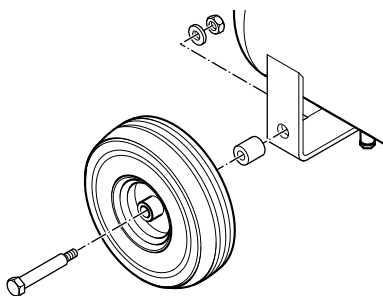

4.2 Mains connection

⚠ Danger! High voltage
Operate device in dry environment only.

Operate device only on a power source complying with the following requirements:

- outlets properly installed, earthed and tested;
- fuse protection in accordance with the technical specifications.


Position power cable so it does not interfere with the work and is not damaged.

Always check to see that the device is switched OFF before plugging in.

⚠ Check direction of rotation!
Depending on the phase sequence, the motor could turn in the wrong direction. This can damage the machine. Therefore the direction of rotation must be checked after any reconnection to the power mains: the belt pulley of the compressor pump must turn in the direction indicated by the arrow on the belt guard. If it turns in the wrong direction, two

phases must be interchanged in the power cable plug:

1. Unplug.
2. Interchange phases with a screwdriver as illustrated:
 - Push switch (19) in slightly.
 - Turn switch by 180°.

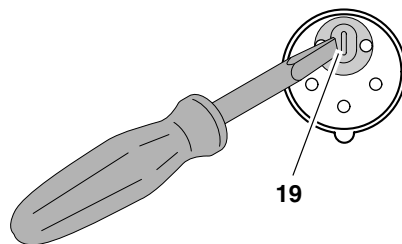

3. Plug power cable in again.

Protect power cable from heat, aggressive liquids and sharp edges.


Use only extension cables with sufficient lead cross section (see "Technical Specifications").

Do not stop the machine by unplugging, but switch OFF using the ON/OFF switch.

Unplug after use.

4.3 Generating compressed air

1. Start device (22) and wait until the max. tank pressure is reached (compressor shuts off). The tank pressure is indicated by the tank pressure gauge (23).

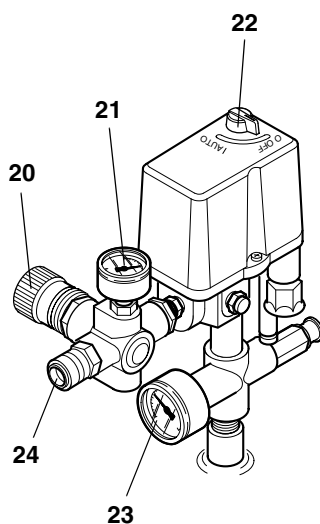

2. Set pressure regulator (20) to required working pressure. The current working pressure is indicated by the regulated pressure gauge (21).

⚠ Caution!
The regulated pressure may not be set higher than the max. working pressure of the connected air tools!

3. Connect air hose to compressed air outlet (24).

4. Connect air tool.
You are now ready to work with the air tool.
5. Switch the compressor OFF, if you do not continue working immediately afterwards. Unplug after switching OFF.

5. Care and maintenance

⚠ Danger!
Prior to all servicing:

- Switch Off.
- Unplug.
- Wait until the device has come to a complete stop.
- Ensure the device and all air tools and accessories connected to it are relieved from pressure.
- Let the device and all air tools and accessories used cool off.

After all servicing:

- Check to see that all safety devices are operational.
- Make sure that no tools or other parts remain on or in the device.

Repair and maintenance work other than described in this section must only be carried out by qualified specialists.


5.1 Periodic maintenance

Prior to each use


- Check air hoses for damage, replace if necessary.
- Check all screwed connections for tightness, tighten if necessary.
- Check power supply cable for damage, if necessary have replaced by a qualified electrician.

Every 50 operating hours


- Check air filter element (25) of compressor pump, clean if necessary.

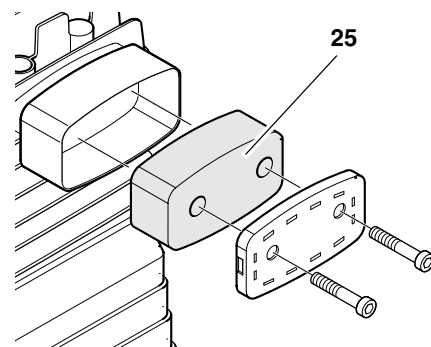

- Check oil level (26) of compressor pump, top up if necessary (27).

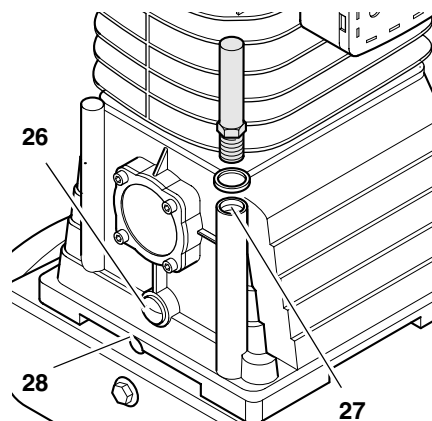


- Drain condensate from pressure vessel (29).

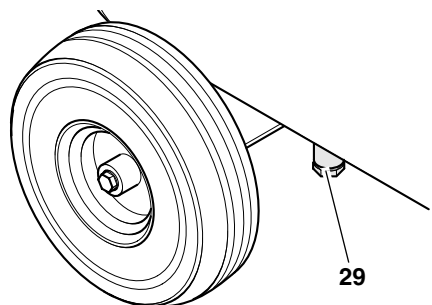

Caution!
The condensate contains oil and must be disposed at a proper collecting point.

- Check V-belt:
 - Remove belt guard (30).
 - Retension V-belt or replace, if necessary.
 - To adjust the V-belt tension, loosen the four screws at the motor base and shift the motor.
 - Tighten the screws at the motor base again.
 - Replace the belt guard.

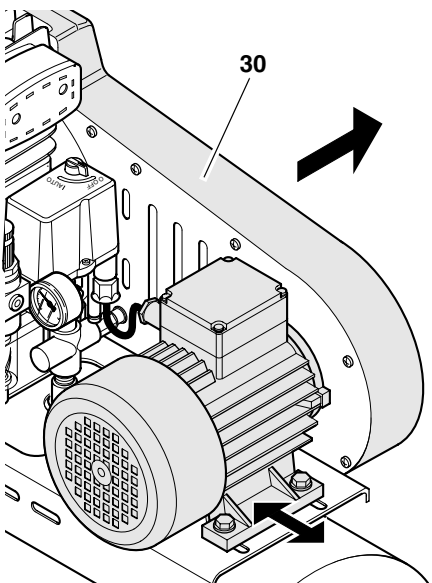

Every 250 operating hours

- Replace air intake filter element of compressor pump.
- Replace air filter element of filter/regulator unit.

Every 500 operating hours

- Drain oil from compressor pump through the drain plug (28) and fill with fresh oil.

⚠ Dispose of the waste oil environmentally safe by taking it to a proper collecting point!

Every 1000 operating hours

- Have unit serviced by an authorized service station. This will extend the compressor's service life considerably.

5.2 Device storage

1. Switch unit OFF and unplug.
2. Release pressure from tank and all connected air tools.
3. Store device in such way that it cannot be started by unauthorized persons.

⚠ Caution!
Do not store device unprotected outdoors or in damp environment.

Do not lay device on its side for transportation or storing.

6. Available Accessories

For special applications the following accessories are available at your specialist dealer – see back cover for illustrations:

Sealing

- A** Air Caulking Gun KP 910 for commercially available cartridges.
Stock-no. 090 101 0030

Sheet metal cutting

- B** Air Nibbler BN 540 extra small cutting radius; cuts steel sheet up to 1.0 mm thickness.
Stock-no. 090 100 6784

Drilling

- C** Air Drill BM 310 especially handy tool for low-fatigue working; right-hand rotation only.
Stock-no. 090 100 6725
- Air Drill BM 500 (not illustrated) with 3/8" keyless chuck, fully reversible with quick reverse feature.
Stock-no. 090 105 4533

Stapling / nailing

- D** Combination Air Stapler/Nailer Kombi 40/50 for staples (type 90) from 20 mm to 40 mm and finishing nails (type SKN) from 20 mm to 50.
Stock-no. 090 105 4720mm.
- Combination Air Stapler/Nailer Kombi 40/50

for staples (type 90) from 15 mm to 32 mm and finishing nails (type SKN) from 16 mm to 32.
Stock-no. 090 105 4711mm.

- Air Stapler KG 80/16 (not illustrated) for staples (type 80) from 6 mm to 16 mm.
Stock-no. 090 105 4681
- Air Stapler KG 90/25 (not illustrated) for staples (type 90) from 15 mm to 25 mm.
Stock-no. 090 105 4690
- Air Stapler KG 90/40 (not illustrated) for staples (type 90) from 20 mm to 40 mm.
Stock-no. 090 105 4703
- Air Finish Nailer SKN 50 (not illustrated) for finishing nails (type SKN) from 20 mm to 50 mm.
Stock-no. 090 105 4738

Spray painting

- E** Spray Gun FB 2200 HVLP high-volume low-pressure feature reduces paint mist bounce-back and provides thicker coating at less paint consumption.
Stock-no. 090 105 4460
- Paint Spray Gun FB 2200 (not illustrated) with 0.5 l flow cup; professional spray gun; steplessly adjustable round, horizontal and vertical spray pattern.
Stock-no. 090 105 4452
- Paint Spray Gun SB 200 (not illustrated) with 1.0 l siphon cup.
Stock-no. 090 100 3882
- Paint Spray Gun FB 150 (not illustrated) with 0.5 l flow cup; for spraying primers and paints of varying viscosity.
Stock-no. 090 100 3874
- Paint Spray Gun FB 90 (not illustrated) with 0.75 l flow cup; for spraying primers and paints of varying viscosity.
Stock-no. 090 105 6064

Chiselling

- F** Air Hammer Set MHS 450 for construction and auto body work
Stock-no. 090 100 9210
- Air Hammer Set MHS 315 (not illustrated) to take off plaster and tiles and for light chiselling work.
Stock-no. 090 100 6911

Tyre inflating / checking

- G** Tyre Inflator Gauge RF 480 professional version (calibrated).
Stock-no. 090 105 4630
- Tyre Inflator Gauge RF 363 (not illustrated) same as RF 480, but not calibrated.
Stock-no. 090 105 4622

- Tyre Inflator Gauge RF 200 (not illustrated) for inflating tyres and balls (calibrated).
Stock-no. 090 105 6188
- Tyre Inflator Gauge RF 100 (not illustrated) same as RF 200, but not calibrated.
Stock-no. 090 102 6724

Cleaning

- H** Blow Gun BP 200
all plastic body.
Stock-no. 090 105 4606
- Blow Gun BP 300 (not illustrated) all plastic body; venturi nozzle provides extra high air volume.
Stock-no. 090 105 4614
 - Blow Gun BP 70 (not illustrated) light metal body (with 100 mm extension nozzle).
Stock-no. 090 102 6726
 - Blow Gun BP 60 (not illustrated) light metal body (short).
Stock-no. 090 102 6718

Driving screws

- I** Impact Wrench SR 230
rugged impact wrench for DIY and automotive applications.
Stock-no. 090 105 6170
- Impact Wrench SR 340 Set (not illustrated) professional version; many accessories included.
Stock-no. 090 105 6137
 - Impact Wrench SR 140 Set (not illustrated) for multiple DIY and automotive applications; complete with many accessories.
Stock-no. 090 100 8582
 - Impact Wrench SR 120 Set (not illustrated) requires only minimal amount of air, thus can be run on small compressors; complete with many accessories.
Stock-no. 090 100 6750
 - Ratchet Wrench RS 320 (not illustrated) due to narrow design and rubber-covered ratchet head it is well suited for automotive applications and work in confined areas.
Stock-no. 090 105 4541
 - Ratchet Wrench RS 220 Set (not illustrated) this set comes complete with many accessories.
Stock-no. 090 100 6717
 - Air Screwdriver DS 1610 (not illustrated) reversible with quick reversing action.
Stock-no. 090 101 2440

Spraying

- J** Spray Gun SPP 161
for spraying degreaser, oil, liquid

wax, etc.

Stock-no. 090 105 4525

- Combination Spray Gun UBS 820 (not illustrated) for commercially available 1.0 l screw-top cartridges.
Stock-no. 090 105 4479

Air hoses

- K** Hose Reel ST 200
swivels through 360°; with 30 m PU air hose.
Stock-no. 090 105 4568
- Braided Air Hose (not illustrated) c/w quick coupler and male plug; length 5 m; outer diameter 12 mm; inner diameter 6 mm.
Stock-no. 090 105 4908
 - Braided Air Hose (not illustrated) c/w quick coupler and male plug; length 10 m; outer diameter 12 mm; inner diameter 6 mm.
Stock-no. 090 105 4916
 - Braided Air Hose (not illustrated) c/w quick coupler and male plug; length 10 m; outer diameter 15 mm; inner diameter 9 mm.
Stock-no. 090 105 4924
 - Bulk Braided Air Hose (not illustrated) length 50 m; outer diameter 15 mm; inner diameter 9 mm.
Stock-no. 090 105 4932
 - Self-storing Coil Air Hose, Rilsan (not illustrated) c/w quick coupler and male plug; 2.5 m working length; outer diameter 8 mm; inner diameter 6 mm.
Stock-no. 090 105 4940
 - Self-storing Coil Air Hose, Rilsan (not illustrated) c/w quick coupler and male plug; 7.5 m working length; outer diameter 8 mm; inner diameter 6 mm.
Stock-no. 090 105 4959
 - Self-storing Coil Air Hose, Rilsan (not illustrated) c/w quick coupler and male plug; 10.0 m working length; outer diameter 10 mm; inner diameter 8 mm.
Stock-no. 090 105 4967
 - Hand-crank Hose Reel SA 100 (not illustrated) c/w 20.0 m braided air hose; outer diameter 15 mm; inner diameter 9 mm.
Stock-no. 090 105 4975
 - Automatic Retractable Hose Reel SA 200 (not illustrated) suitable for wall and ceiling mounting; retracts automatically by simply pulling on hose; with 8 m PU air hose; outer diameter 13 mm; inner diameter 8 mm.
Stock-no. 090 105 4550

Accessory kits

- L** Accessory Kit LPZ 7-S
comprising: blow gun, tyre inflator gauge, tyre valve adaptor, ball valve needle, paint spray gun, spray gun, self-storing coil air hose.
Stock-no. 090 100 3858
- Accessory Kit LPZ 7-P (not illustrated) comprising: blow gun, tyre inflator gauge, tyre valve adaptor, ball valve needle, paint spray gun, spray gun, 10 m braided air hose.
Stock-no. 090 100 3890
 - Accessory Kit LPZ 6-P (not illustrated) comprising: blow gun, tyre inflator gauge, tyre valve adaptor, ball valve needle, paint spray gun, 5 m braided air hose.
Stock-no. 090 104 4487
 - Accessory Kit LPZ 4 (not illustrated) comprising blow gun, tyre inflator gauge, paint spray gun, self-storing coil air hose.
Stock-no. 090 101 3845
 - Accessory Kit LPZ 2 (not illustrated) comprising change handle with blow gun, tyre inflator gauge, paint spray gun, self-storing coil air hose.
Stock-no. 090 105 5971

7. Trouble shooting

Danger!
Prior to all servicing:

- **Switch Off.**
- **Unplug.**
- **Wait until the device has come to a complete stop.**
- **Ensure the device and all air tools and accessories connected to it are relieved from pressure.**
- **Let the device and all air tools and accessories used cool off.**

After all servicing:

- **Check to see that all safety devices are operational.**
- **Make sure that no tools or other parts remain on or in the device.**

Compressor does not run:

- No mains voltage.
 - Check cables, plug, outlet and mains fuse.
- Mains voltage too low.
 - Use only extension cables with sufficient lead cross section (see "Technical specifications"). Avoid using extension cable when device is cold.
- Compressor was stopped by unplugging.
 - Switch compressor OFF at the On/Off switch, then ON again.

- Motor protection tripped, e.g. by insufficient cooling (cooling fins covered).
 - Switch compressor OFF at the On/Off switch; remove cause for overheating; let cool off for approx. 10 minutes; reset the motor protection switch; switch compressor ON again at the On/Off switch.

Compressor runs but does not build up sufficient pressure.

- Condensate drain of pressure vessel leaky.
 - Check gasket of drain cock(s); replace if necessary.
 - Tighten drain cock(s) fingertight.
- Check valve leaky.

- Have check valve serviced by qualified service centre.

Air tool is not supplied with sufficient pressure.

- Pressure regulator not opened wide enough.
 - Open pressure regulator more.
- Hose connection between compressor and air tool leaky.
 - Check air hoses, replace defective parts if necessary.

8. Repairs



Danger!

Repairs to power tools must be carried out by qualified electricians only!

Electric tools in need of repair can be sent to the service centre in your country. See spare parts list for address.

Please attach a description of the fault to the power tool.

9. Environmental protection

The machine's packaging can be 100 % recycled.

Worn out devices and accessories contain considerable amounts of valuable raw and plastic materials, which can be recycled.

These instructions are printed on chlorine-free bleached paper.

10. Technical specifications

Suction capacity	l/min	290
Free air delivery (volume flow rate)	l/min	165
Filling rate	l/min	195
Working pressure (compression end pressure)	bar	10
Pressure vessel volume	l	50
No. of air outlets		2
Compressor pump model		B 2800
No. of cylinders		2
Speed (compressor pump)	min ⁻¹	1300
Motor capacity	kW	2.0
Supply voltage (50 Hz)	V	400
Rated current	A	3.7
Fuse protection min.	A	10 (time-lag)
Degree of protection		IP 44
Maximum overall length when using extension cables with: – 3 x 1.5 mm ² lead cross-section – 3 x 2.5 mm ² lead cross-section	m m	100 160
Oil grade		10 W 40
Oil quantity for oil change	l	0.21
Dimensions: length x width x height	cm	88 x 49 x 77
Weight	kg	46
Sound pressure level L _{PA} at 4 m maximum	dB (A)	71 ± 3
Sound power level L _{WA}	dB (A)	91 ± 3



A 090 101 0030



B 090 100 6784



C 090 100 6725



D 090 105 4720



E 090 105 4460



F 090 100 9210



G 090 105 4630



H 090 105 4606



I 090 105 6170



J 090 105 4525



K 090 105 4568



L 090 100 3858